



1. Remove tubing netting sheath from end of tubing bundle

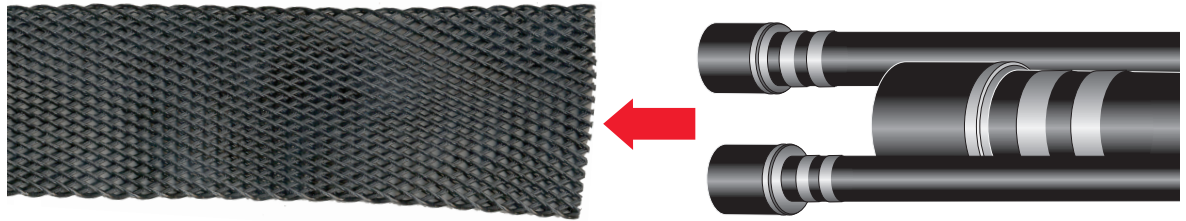


2. Remove protective end caps from tubing barbs.

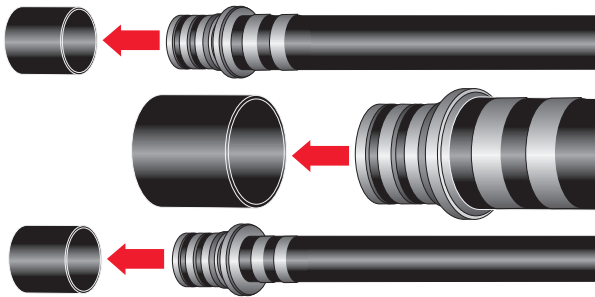

IMPORTANT NOTE: The smallest fitting is the air supply. This fitting needs to be inserted into the pump hole marked "I". The next larger fitting is the air exhaust fitting. This fitting needs to be inserted into the pump hole marked "E". If these two fittings are not installed into the correct holes the pump will not operate. It is easiest to insert the discharge line first then insert the pin, then either the air or exhaust and pin.

4. Insert male portion of fitting (with tubing attached) fully into its appropriate mating fitting on the pump.

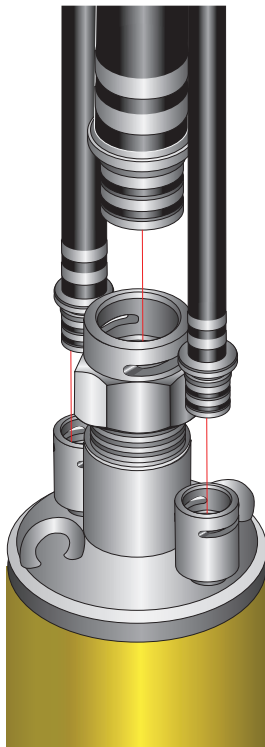

5. Push retaining clips into their mating retaining slots. Push clip into slot until it "clicks" into its locked position.

